



## **E-Z** PROGRAMMING THE LP-600 SERIES

### ***Programming Preset Memories.....***

1. Press the "Preset" menu to light the "Page" LED
2. Select desired page (1-4) using display "Up" or "Down" arrows
3. Press "Record" button
4. Set desired look by arranging X scene channel faders
5. Store by pressing bump button beneath desired preset fader on Y scene, continue setting and recording
6. Press "Run" to play scenes back

### ***Programming a Chase.....***

1. Press "Chase" button to light "Pattern" LED
2. Select desired pattern (5-11) on display using "Up" arrow
3. Press "Chase" menu button again to light "Step" LED
4. Press "Record" button
5. Set desired look on X scene faders
6. Press the display "Up" key to record & advance to next step, continue to set and record chases
7. Press "Run" key to end programming

### ***To record Stack Presets.....***

1. Press the "Stack" menu button to display 'now' scene.  
Use the "Down" key to set now to '—'(CL may momentarily appear).
2. Press the "Stack" menu key again to light the "next" Led.
3. Use the display up and down keys to select a cue number of 1 through 50.
4. Set levels on stage using manual channels or Presets.
5. Press the "Record" key once. The "Record" Led will begin to blink.
6. Press "Record" again to memorize the cue. The next cue number will advance.
7. In record mode, continue setting desired levels on stage and recording cues (stacking).
8. Press "Run" to end recording and activate "Cue Stack".
9. While in "next" mode use display Up and Down keys to call up first cue for playback.
10. Use "Stack" fader to manually crossfade between cues or use GO button to time fade to next cue.